


# Medium Duty Workbench Assembly Guide





## Medium Duty Workbench Components

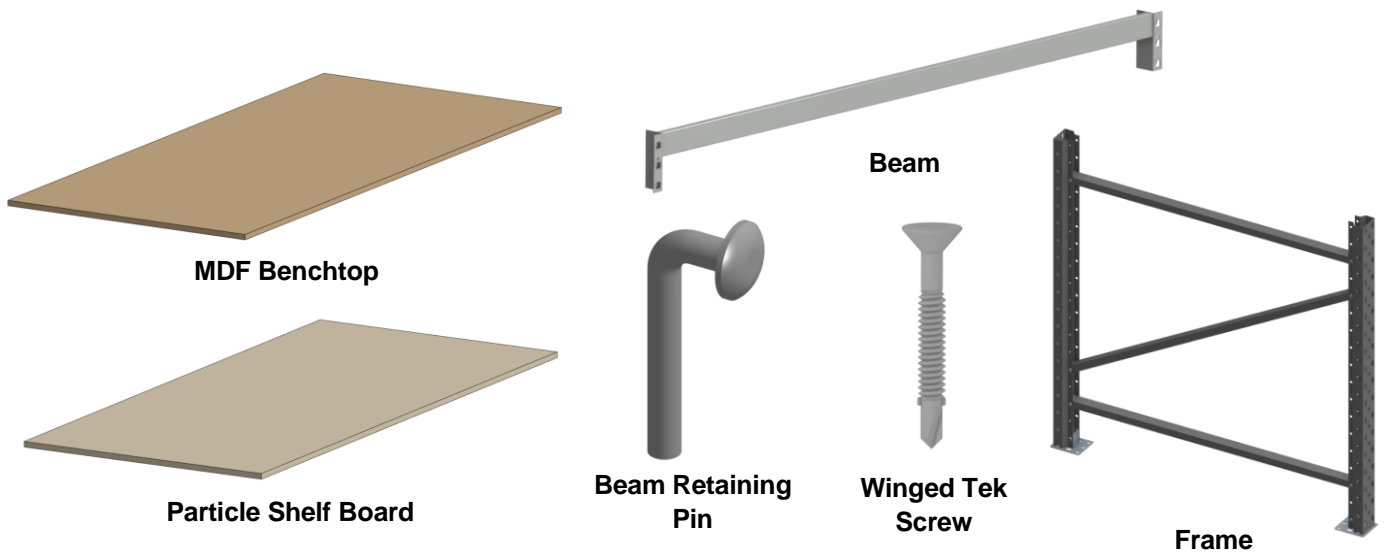

### Beam Connection

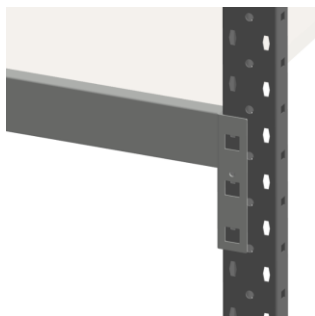


Figure 1

The Beams connect to the face of the Frame Posts as shown in Figure 1. The top Beam level will need to be positioned at the top of the Frame Post to allow for the Benchtop to overhang

### Beam Retaining Pin

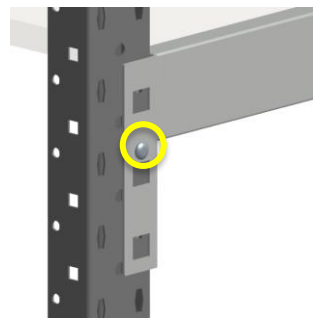


Figure 2

The Beam Retaining Pins insert into the hole on the face of the Beam Connector as circled in Figure 2.

### Particle Board - Undershelf

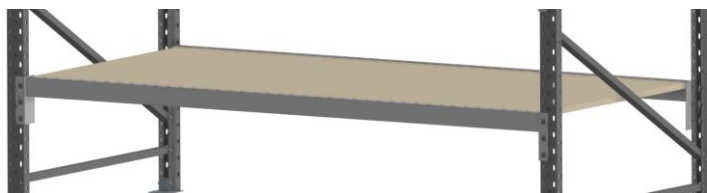


Figure 3



Figure 4

The Particle Board for the Undershelf fit between the recessed step of the two lower parallel Beams as shown in Figure 3 & 4.

### MDF - Benchtop



Figure 5

The MDF Benchtop sits across the top 2 Beams. This is fixed down by using the Winged Tek Screws through the MDF Board into the top of the Beams